PHILIPS

14AA 3327.

PHILIPS

PHILIPS

Downloaded from www.Manualslib.com manuals search engine

A

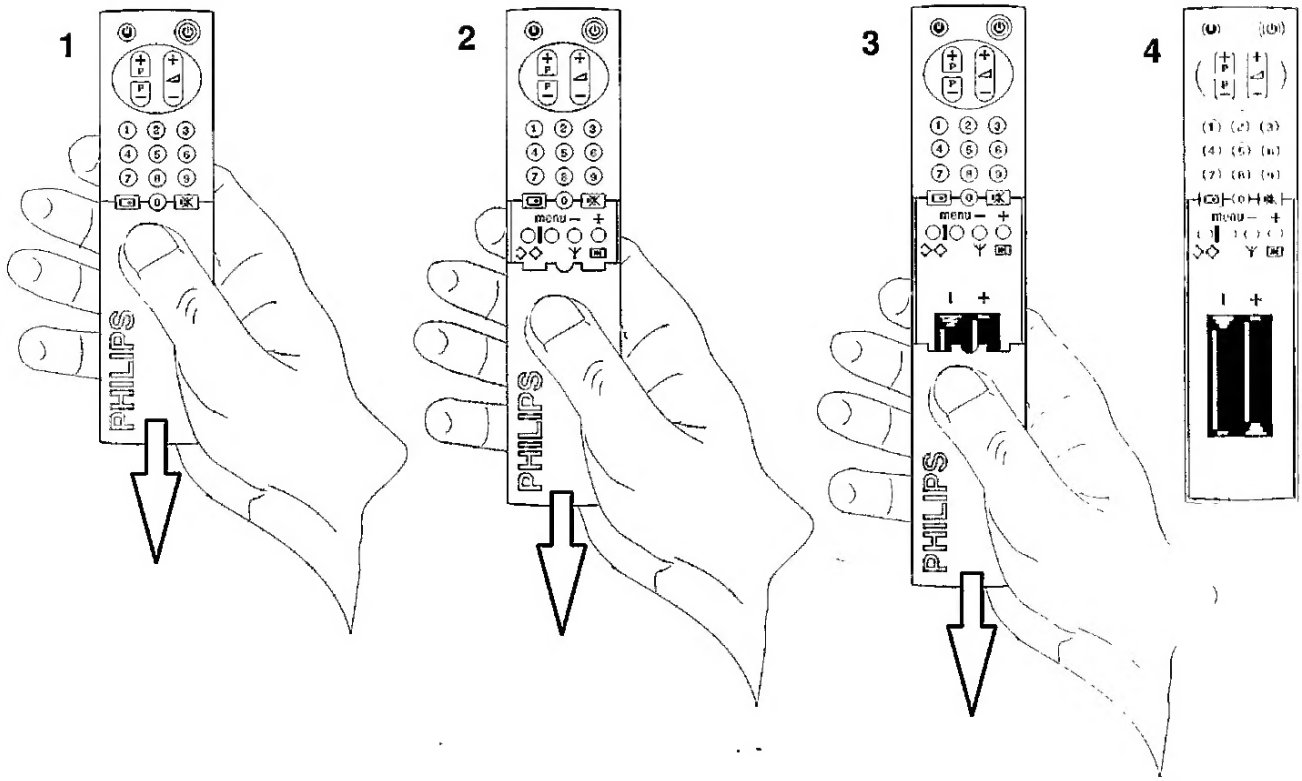

B

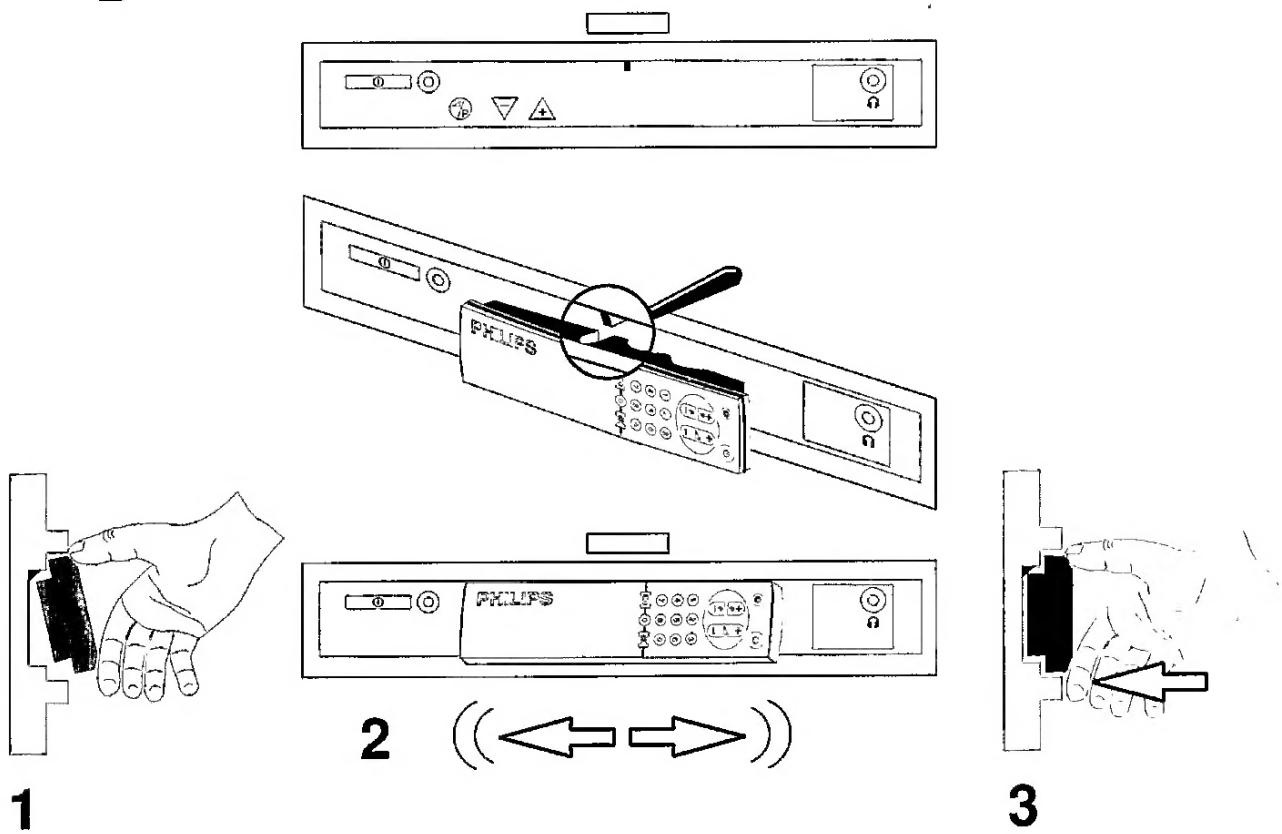

Downloaded from www.Manualslib.com manuals search engine

Installation

Follow the instructions very closely and step by step.
○ This circle in front of a sentence indicates that you have to do something.
▷ This arrow in front of a sentence indicates the result of whet you have done.

Place the TV on a solid base (e.g. a TV/video cabinet).
Leeve at least 3 cm around each side of the TV for ventilation.

The TV can only operate at a mains voltage of 220/240 V~, 50 Hz; consult your dealer if the mains supply is different.

○ Connect the TV to the mains supply socket.
○ Connect the aerial (indoor or outdoor) plug to the ⌐⊢ socket on the back of the TV.

Small screen TV's are equipped with a high performance indoor aerial, nevertheless in some circumstances (specific regions or if surrounded by high buildings) reception problems could occur. Further improvement of reception could be obtained by:
- Rotating or verying the angle of the aerial.
- Using other aerial executions.
- Connecting your TV to an outdoor aerial.

Remote control

○ Slide down the battery cover, as shown on drawing A on the inside cover.
○ Insert the batteries, as indicated on the remote control.
○ Slide up the battery cover.

To support the portable use of the TV, the remote control cen be attached on the front of the TV as indicated on drawing B on the inside cover.

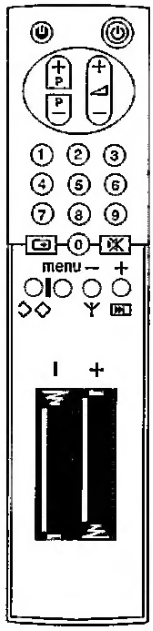

Switching TV on

○ Press ⏻ on the front of the TV.
▷ The TV is switched on.
Does a red light on the TV light up? Then the TV is on Stand-by.
○ Press P - or + or e digit button on the remote control, or - or + on the TV, to switch on the TV egein.

Stand-by

○ By pressing ⏻ on the remote control you can temporarily switch the TV off.
▷ A red light on the TV lights up.
○ Press P - or + or e digit button on the remote control, or - or + on the TV, to switch on the TV again.

Automatic switch off

If after a period of 15 minutes no aerial signal is received, the TV automatically switches to Stand-by.

Switch off your TV overnight instead of leaving it on Stand-by. You save energy and the picture tube is demagnetised which favours good picture quality.

Downloaded from www.Manualslib.com manuals search engine

2 Storing TV channels

39 TV channels can be stored on program numbers. Write down the TV channels and the assigned program numbers while storing.

Follow carefully steps **a, b, c, d, e.**

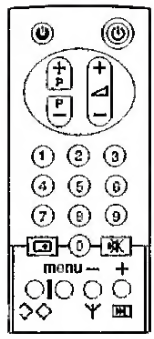

a

○ Press ◇◇.

▷ The current program number and the TV-system are displayed on the screen. You can select a different TV-system for each separate program number.

You can select among the following TV-systems:

Region	TV-system	Used in
EUROPE	PAL BG - SECAM BG	West European countries except France, except United Kingdom and Ireland.
UK	PAL I	United Kingdom and Ireland.
FRANCE	SECAM L L'	France.

b

○ Press Y one or more times to select the required TV-system

c

○ Press ⏭ to start the search.

▷ The TV automatically searches until a TV channel is found.

○ If you want to continue searching for a specific TV channel then press ⏭ again.

d

○ Press P - or + to select the program number (1 to 39) where you want to store the TV channel.

▷ The selected program number is displayed on the screen.

e

○ Press ◇◇ to store this selection.

REPEAT Repeat steps **a, b, c, d, e** until all the TV channels you require have been stored on program numbers.

Auto Programming

The Auto Programming function can be used to find all available TV channels broadcasted in the TV-system FRANCE (SECAM L L' - France).

After Auto Programming is started, the TV starts searching for a channel. If a channel is found, it will be automatically stored on program number 1. Seerching will start again automatically. If another channel is found, it will be stored on program 2, etc.
At the end of the Auto Programming cycle the TV switches to program 1.

○ Press ◇◇.

○ Press ⏭ longer than 4 seconds to start the Auto Programming.

HELP If you want to stop the Auto Programming, press first P + then ◇◇.

Downloaded from www.Manualslib.com manuals search engine

Operation

On Screen Display

The On Screen Display information allows you to see the program number on which a TV channel is stored, the time left, if the sleep-timer is used and the volume bar if the volume is adjusted.

- Press ⊡ to display information on the screen.
- Press ⊡ again to switch off information.

GB

Selecting TV channels

- Press P - or + on the remote control or press one or two digit buttons.

.or

- Press - or + on the TV.

Volume control

- Press ◿ - or + on the remote control.

or

- Press ◿ / P on the TV.
  - A bar is displayed on the screen.
- Press - or + to adjust the volume.4 seconds after you have adjusted the volume, the - and + buttons will work as program - and + again.

Interrupting the sound

- Press 🔇 to switch off the sound.
- Press 🔇 again or ◿ + to switch on the sound.

Changing picture settings

With the menu on the screen you can adjust the picture settings.

- Press MENU
  - BRIGHTNESS appears, adjust the brightness by pressing - or +.
- Press MENU
  - CONTRAST appears, adjust the contrast by pressing - or + .
- Press MENU
  - COLOUR appears, adjust the colour by pressing - or + .
- Press MENU
  - The menu disappears.



Storing personal preferences

Picture end sound settings have certain values when switching on the TV. You can change these values according to your personal preference.

- Adjust the picture and sound settings according to your personal preference.
- Press ◇◇ twice to store your personal preference.

Sleep-timer

With this feeture you cen select a time period after which the TV switches automatically to Stand-by mode.

- Press ⏻ until the required time period is displayed on the screen. This time period can be set in steps of 15 minutes starting from 90 minutes downwards. The count-down starts immediately after the time period is selected. You can see the remaining time by pressing ⊡. During the final minute of the selected time period, the seconds remaining begin to "count down" on the screen, informing you that the TV is going to switch off. At the end of this time period the TV switches to Stand-by mode.

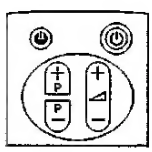

HELP

- If you want to stop the "Sleep-timer" press ⏻ until the selected time period displayed on the screen is "00".

Downloaded from www.Manualslib.com manuals search engine

Peripheral equipment

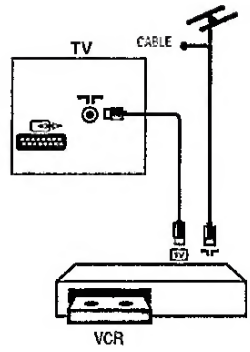

Always read the operating manual supplied with your video recorder or other electronic equipment first.

Connecting via aerial cable

- Unplug the aerial plug from your TV and plug it into the aerial input ⊓ of your video recorder.
- Connect an aerial cable to the output TV of your video recorder and to the aerial input ⊓ of your TV.

To store the signal of your video recorder on a TV program number refer to the section "Storing TV channels".

Connecting via eurocable (scart)

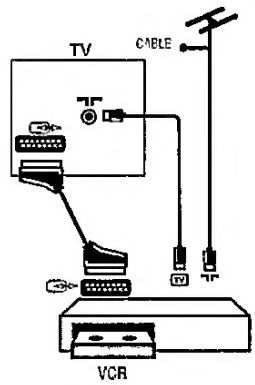

- Connect the eurocable to the euroconnector socket of your video recorder or electronic equipment and to the euroconnector socket of your TV.
- Connect an aerial cable to the output TV of your video recorder and to the aerial input ⊓ of your TV.

In this case the TV is ready to receive a signal via eurocable.
If, after switching on the video recorder or other electronic equipment, the TV does not show the picture from the electronic equipment automatically, select program 0.

Connecting headphones

- Connect the headphones plug (impedance 8-1000 ohm; jack 3.5 mm.) to the 🎧 socket.

▷ The TV-loudspeaker is switched off automatically when the headphones are connected.

Tips

Poor or no picture:

Is your TV set or indoor aerial located too close to loudspeakers, unearthed audio equipment or neon lights, etc.?
Is the aerial connected properly?
Are the plugs tightly connected to the aerial socket and are the connection facilities to any other installed TV in good condition?
If an indoor aerial is used, refer to the section "Installation" to improve the reception.

Remote control is not working properly:

Probably the batteries are flat, replace the batteries.

No picture from electronic equipment connected via eurocable:

Did you try selecting program 0 ?
Is the electronic equipment switched on and is START or PLAY pressed?

No solution

Switch your TV off and on again with the ⏻ button.
Never attempt to repair a defective TV set yourself.
Switch off the TV and call your dealer or TV-technician when nothing helps or when:

- A white horizontal stripe appears across the whole screen.
- The red lamp below the screen starts blinking when no buttons are pressed on the remote control .

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

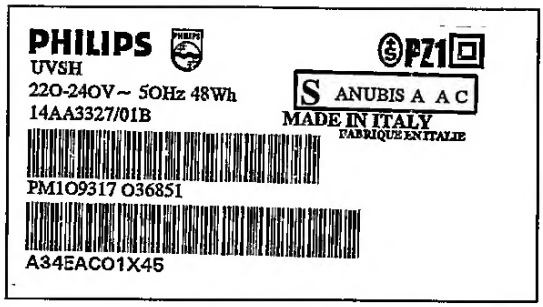

Printed in Italy by G.S.F. 93/12 11 10 9 8 7 6 5 4

14AA3327

RC 3119 105 2021.2

Downloaded from www.Manualslib.com manuals search engine